


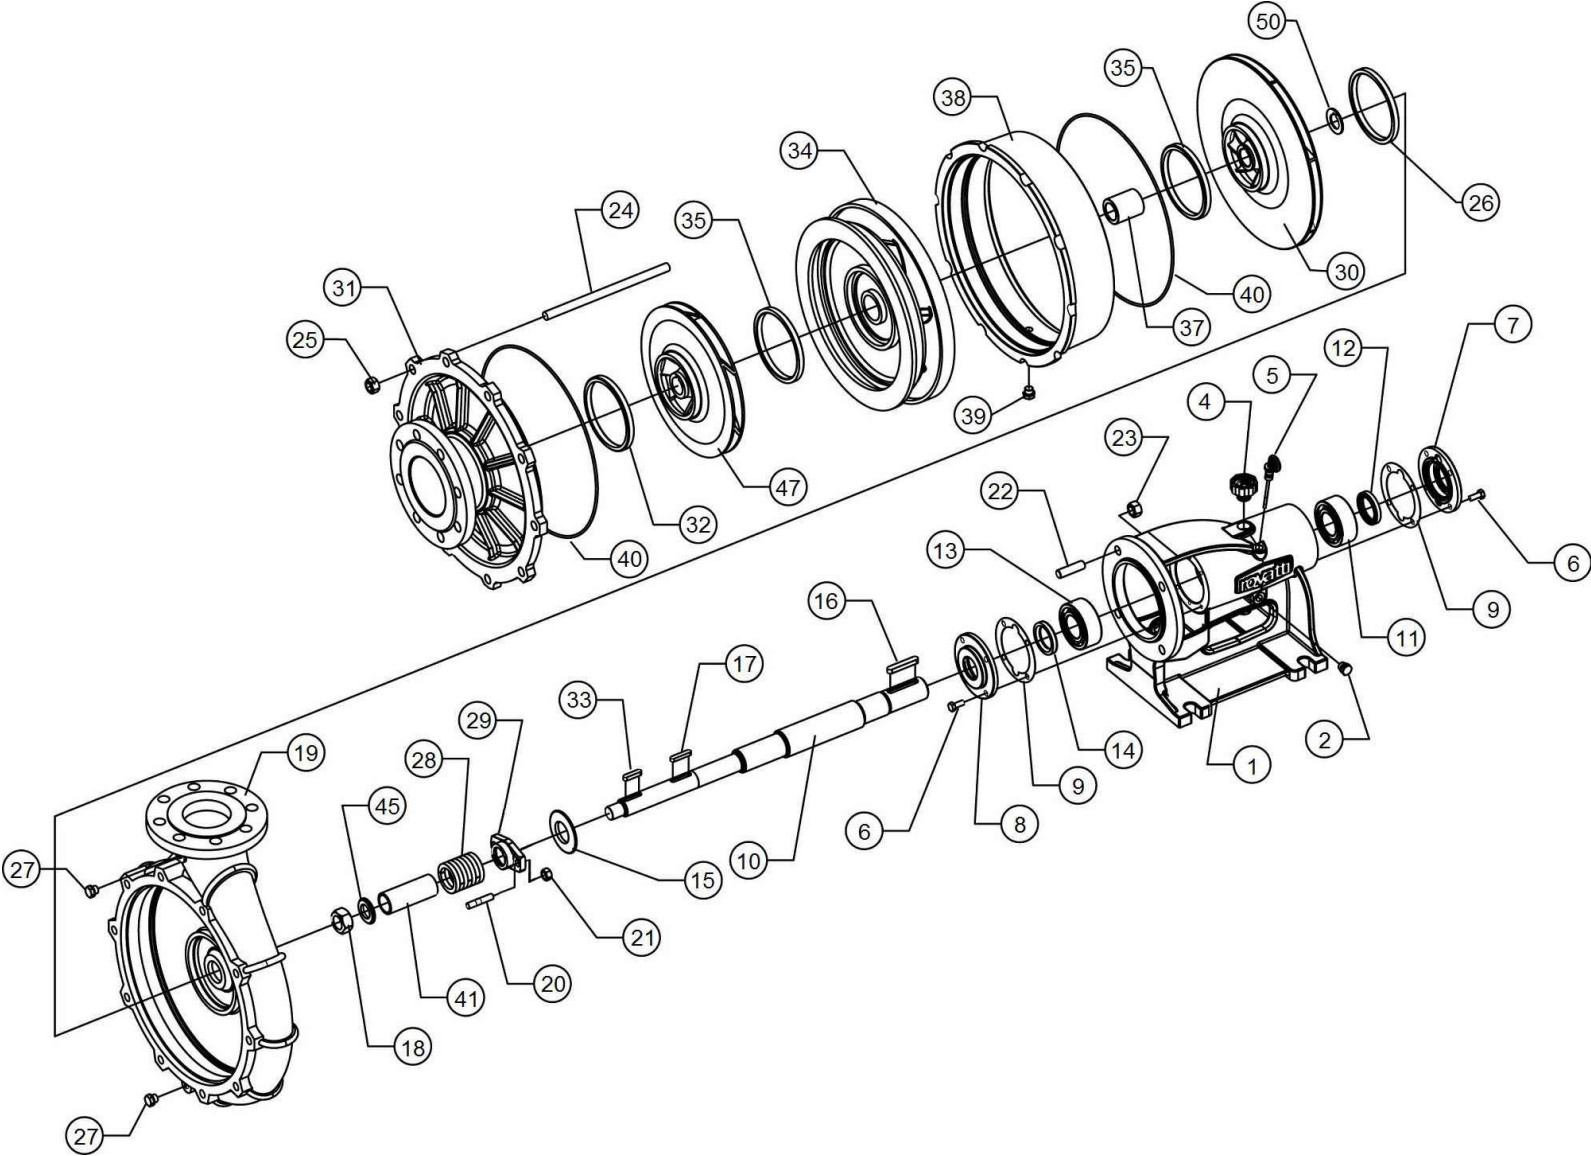























S1K50/2E







S1K50/2E

		Code	Description	Qty
1		203162A	Bearing support	1
2		204470B	Magnetic plug	1
4		203370P	Breather plug	1
5		203325P	Oil dipstick	1
6		3VTCEI020	Screw	6
7		203324A/A	Cover	1
8		203324A/A	Cover	1
9		203326F	Gasket	2
10		209541H	Shaft	1
11		3CU036	Ball bearing	1
12		3AT004	Seal ring	1
13		3CU036	Ball bearing	1
14		3AT004	Seal ring	1
15		3AP002	Seal ring	1
16		3LI012	Key	1
17		3LI049	Key	1
18		3DAB018T	Self-locking nut	1
19		204506A	Pump body	1
20		3VP002T	Stud bolt	2
21		3DEA008T	Nut	2

S1K50/2E

		Code	Description	Qty
22		3VP003	Stud bolt	4
23		3DEA010Z	Nut	4
24		3VP030	Tie rod	8
25		3DEA012Z	Nut	8
26		218527I	Wear ring	1
27		3NO019	Plug	2
28		205639F	Stuffing-box ring	5
29		202018C	Stuffing-box flange	1
30		204462A00	Impeller	1
31		204504A	Suction cover	1
32		218527I	Wear ring	1
33		3LI020	Key	1
34		204422A	Diffuser	1
35		218527I	Wear ring	2
37		204482T	Spacer	1
38		204501A/A	Diffuser shell	1
39		3NO019	Plug	1
40		3OR076	O-Ring	2
41		209545Q	Bush	1
45		206712D	Washer	1

S1K50/2E

		Code	Description	Qty
47		204460A00	Impeller	1
50		209546I	Spacer	1